


Pouch Dispenser Unit

Model #9875




*Use with pouch up to 1 1/2 gallons.

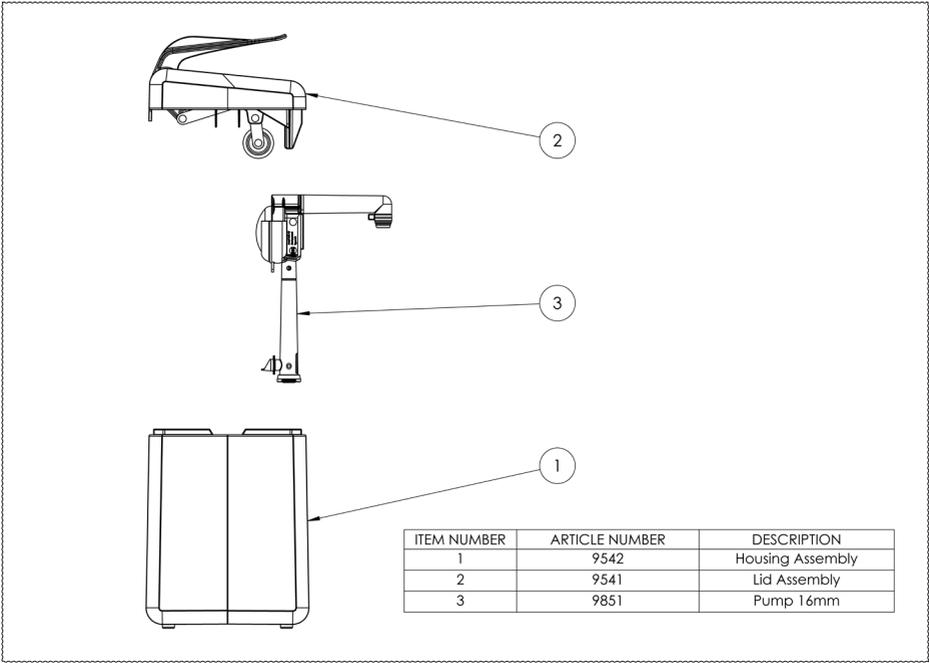


1. Disassemble and clean before use

We recommend to clean the pump before first time use. In order to do so, you have to disassemble the pump's parts, see the detailed instruction below. Wash the parts by hand or in a dishwasher, using ordinary dish soap.

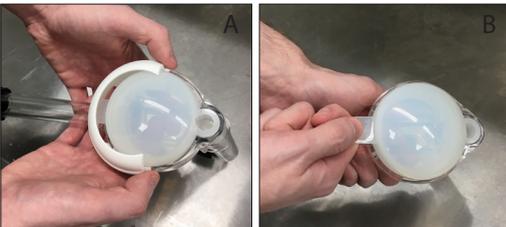

A Remove the dome clip

B Remove the dome

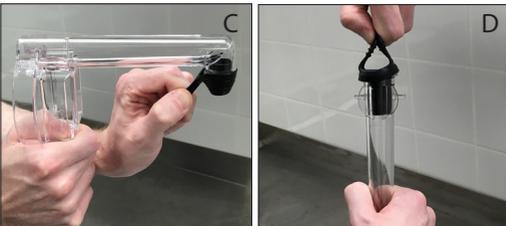

C Remove the nozzle

D Remove the check valve

2. Reassemble after cleaning



Mounting the check valve


Turn the outer part of the check valve inside out. Insert the check valve into the pump housing and flip the outer part of the check valve over the housing. Fasten the valve by hooking the two flaps onto the the taps of the pump housing.

Mounting the nozzle

Turn the outer part of the nozzle inside out. Insert the nozzle into the pump housing and flip the outer part of the nozzle over the housing. Make sure that the ear of the nozzle is pointed towards the dome.

Mounting the dome and clip

Mount the dome. Press the small tap (see the arrow) so that air cannot enter the dome. Mount the dome clip and ensure that the tap of the dome goes through the opening in the dome clip.

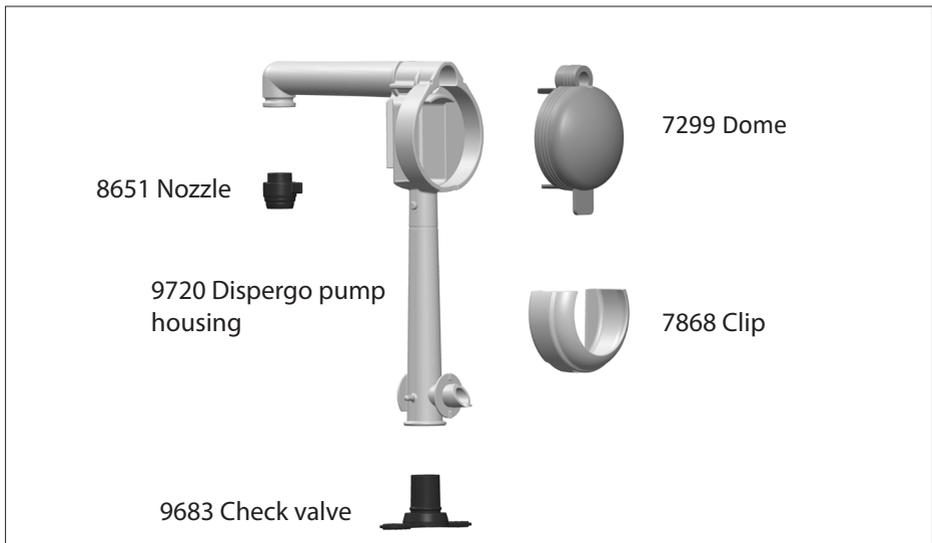



3. Connect the pump to the pouch

Put a new pouch on a flat surface. Locate the fitment. Place the connector of the pump in the centre of the fitment. Firmly push the connector into the fitment until it snaps in place.



4. Insert the pump and pouch

Hold the pump and the pouch with both hands. Let the pouch slide into the dispenser housing and guide the pump into the slots inside the dispenser housing.



5. Secure the pouch

Secure the pouch with the pouch clip.



6. Attach the lid

Lower the lid onto the dispenser housing while holding back the lever. When the lid is in line with the housing you are ready to pump.

Note

The portion size per pump stroke is factory set to 1 fl oz (15 ml). If another portion size is desired, please contact Red Gold for instructions.



Red Gold, Inc.

P.O. Box 83 Elwood, Indiana 46036

For Consumer Relations Only: (866) 729-7187

Company: (765) 557-5500 Fax: (765) 557-5501

Customer Service Hours M-F 8am-5pm EST